

## Custom Series Matt Heafy Set Wiring

Standard wiring with dual voice switching.

### Pot Controls:

1. Neck Volume
2. Neck Tone (Pull for Voice 3)
3. Bridge Volume
4. Bridge Tone (Pull for Voice 2)

### Voice 1 Alnico – Modern Active

(voicing switch open position)

6 String Peak frequency – 650Hz

7 8 9 String Peak frequency – 630 Hz

### Voice 1 Ceramic – Modern Active

(voicing switch open position)

6 String Peak frequency – 630Hz

7 8 9 String Peak frequency – 730Hz

### Voice 2 Alnico – Crisp, clean and fluid

(voicing switch grounded position)

6 String Peak frequency – 420Hz / 8 kHz

7 8 9 String Peak frequency – 420Hz / 8 kHz

### Voice 2 Ceramic – Modern passive attack

(voicing switch grounded position)

6 String Peak frequency – 1.8 kHz

7 8 9 String Peak frequency – 1.8 kHz

### Voice 3 Alnico (Single Coil) - Glassy,

Scooped, Hi-fi

6 String Peak frequency - 4.7 kHz

7 8 9 String Peak frequency - 4.7 kHz

### Voice 3 Ceramic (Single Coil) - Cutting,

overwound single coil

6 String Peak frequency - 4.5 kHz

7 8 9 String Peak frequency - 4.5 kHz

## FISHMAN FLUENCE™

### Custom Series Matt Heafy Set and Modern Humbucker Set - 6,7,8, & 9-String (6-String set shown)

2 x Volume

Bridge Tone: Pull for Voice-2 Bridge & Neck

Neck Tone: Pull for Voice-3 (Single Coil) Bridge & Neck

